

SERVICE MANUALS

Televisions

5-057-1745


ADJUSTING COLOUR WHEEL ON 100L5GE, 100L9GE

1、 Enter the color wheel adjust menu (HE100L5 can only use factory remote control. 100L5GE and 100L9GE can use both factory remote control and regular customer remote control)

a) User remote control: Set->Audio->Advanced->select“Volume Balance”

then type key on remote control: MENU->OK->MENU->OK to enter factory mode;

b) Use factory remote control to enter factory mode;

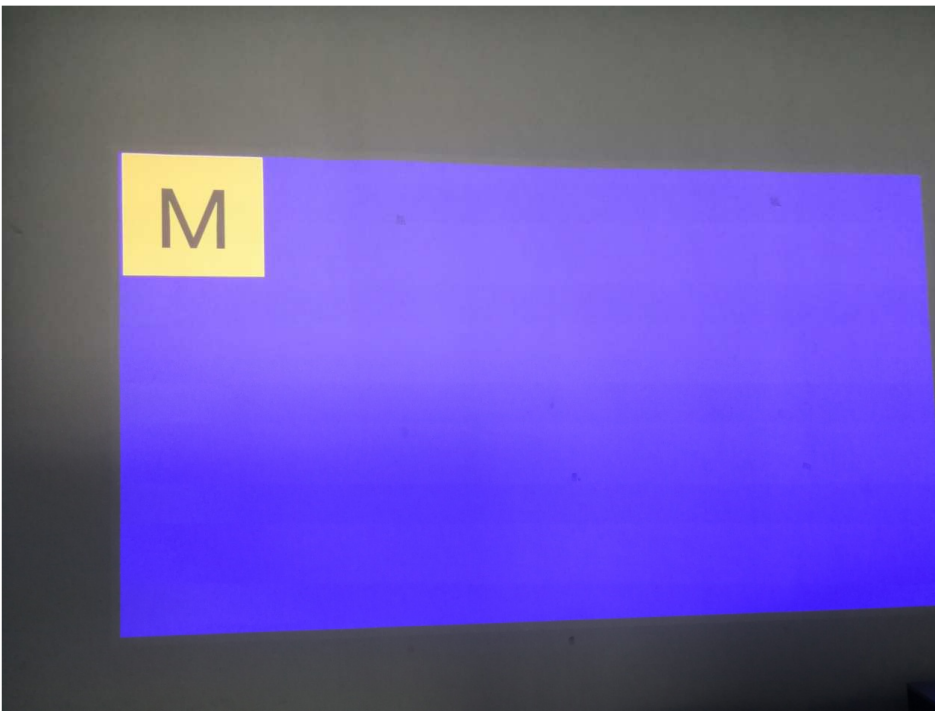


a) Press key F4 on remote control (Factory remote control)

b) factory menu->Option->color wheel adjustment, enter the interface to adjust color wheel (regular remote control)



There are two yellow bars in the bottom center of the screen and you can adjust it to get better picture. The Red, Green, Blue & White block of the above picture should be as smooth as possible and No grey scale should be visible.

The below example is NG with the visible grey scale.

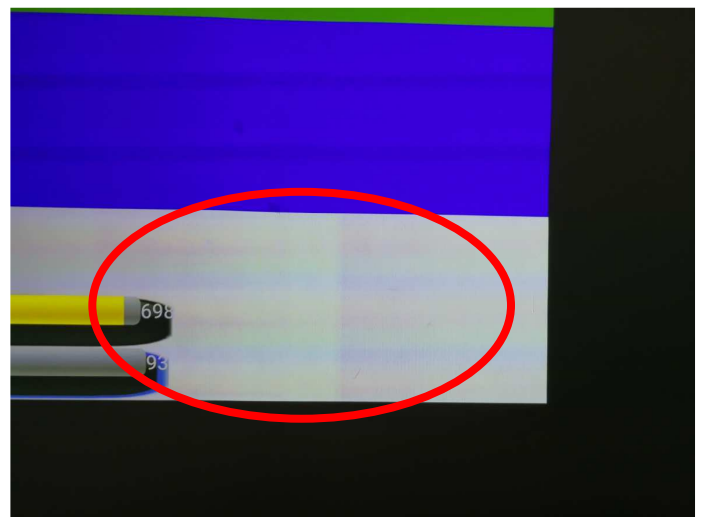

When the adjustment is done, exit the factory mode.